


**Towns with Aquifer Protection Areas**

- \* Avon
- \* Beacon Falls
- \* Berlin
- \* Bethany
- \* Bethel
- \* Bethlehem
- \* Bolton
- \* Bristol
- \* Brookfield
- \* Brooklyn
- \* Burlington
- \* Canterbury
- \* Canton
- \* Cheshire
- \* Clinton
- \* Colchester
- \* Coventry
- \* Cromwell
- \* Danbury
- \* Darien
- \* Derby
- \* East Lyme
- \* East Windsor
- \* Enfield
- \* Essex
- \* Farmington
- \* Glastonbury
- \* Goshen
- \* Griswold
- \* Guilford
- \* Hamden
- \* Killingly
- \* Ledyard
- \* Litchfield
- \* Madison
- \* Manchester
- \* Mansfield
- \* Meriden
- \* Middletown
- \* Naugatuck
- \* New Britain
- \* New Hartford
- \* New Milford
- \* Newtown
- \* North Canaan
- \* North Haven
- \* North Stonington
- \* Norwalk
- \* Old Saybrook
- \* Oxford
- \* Plainfield
- \* Plainville
- Plymouth
- \* Portland
- \* Prospect
- \* Putnam
- \* Ridgefield
- \* Rocky Hill
- \* Salisbury
- \* Seymour
- \* Shelton
- \* Simsbury
- \* Southbury
- \* Southington
- \* Sprague
- \* Stamford
- \* Stonington
- \* Thomaston
- Thompson
- \* Tolland
- Vernon
- \* Wallingford
- \* Watertown
- \* Westbrook
- \* Weston
- \* Westport
- \* Willington
- \* Wilton
- \* Woodbury

\* Towns in red have adopted the Final Aquifer Protection Areas

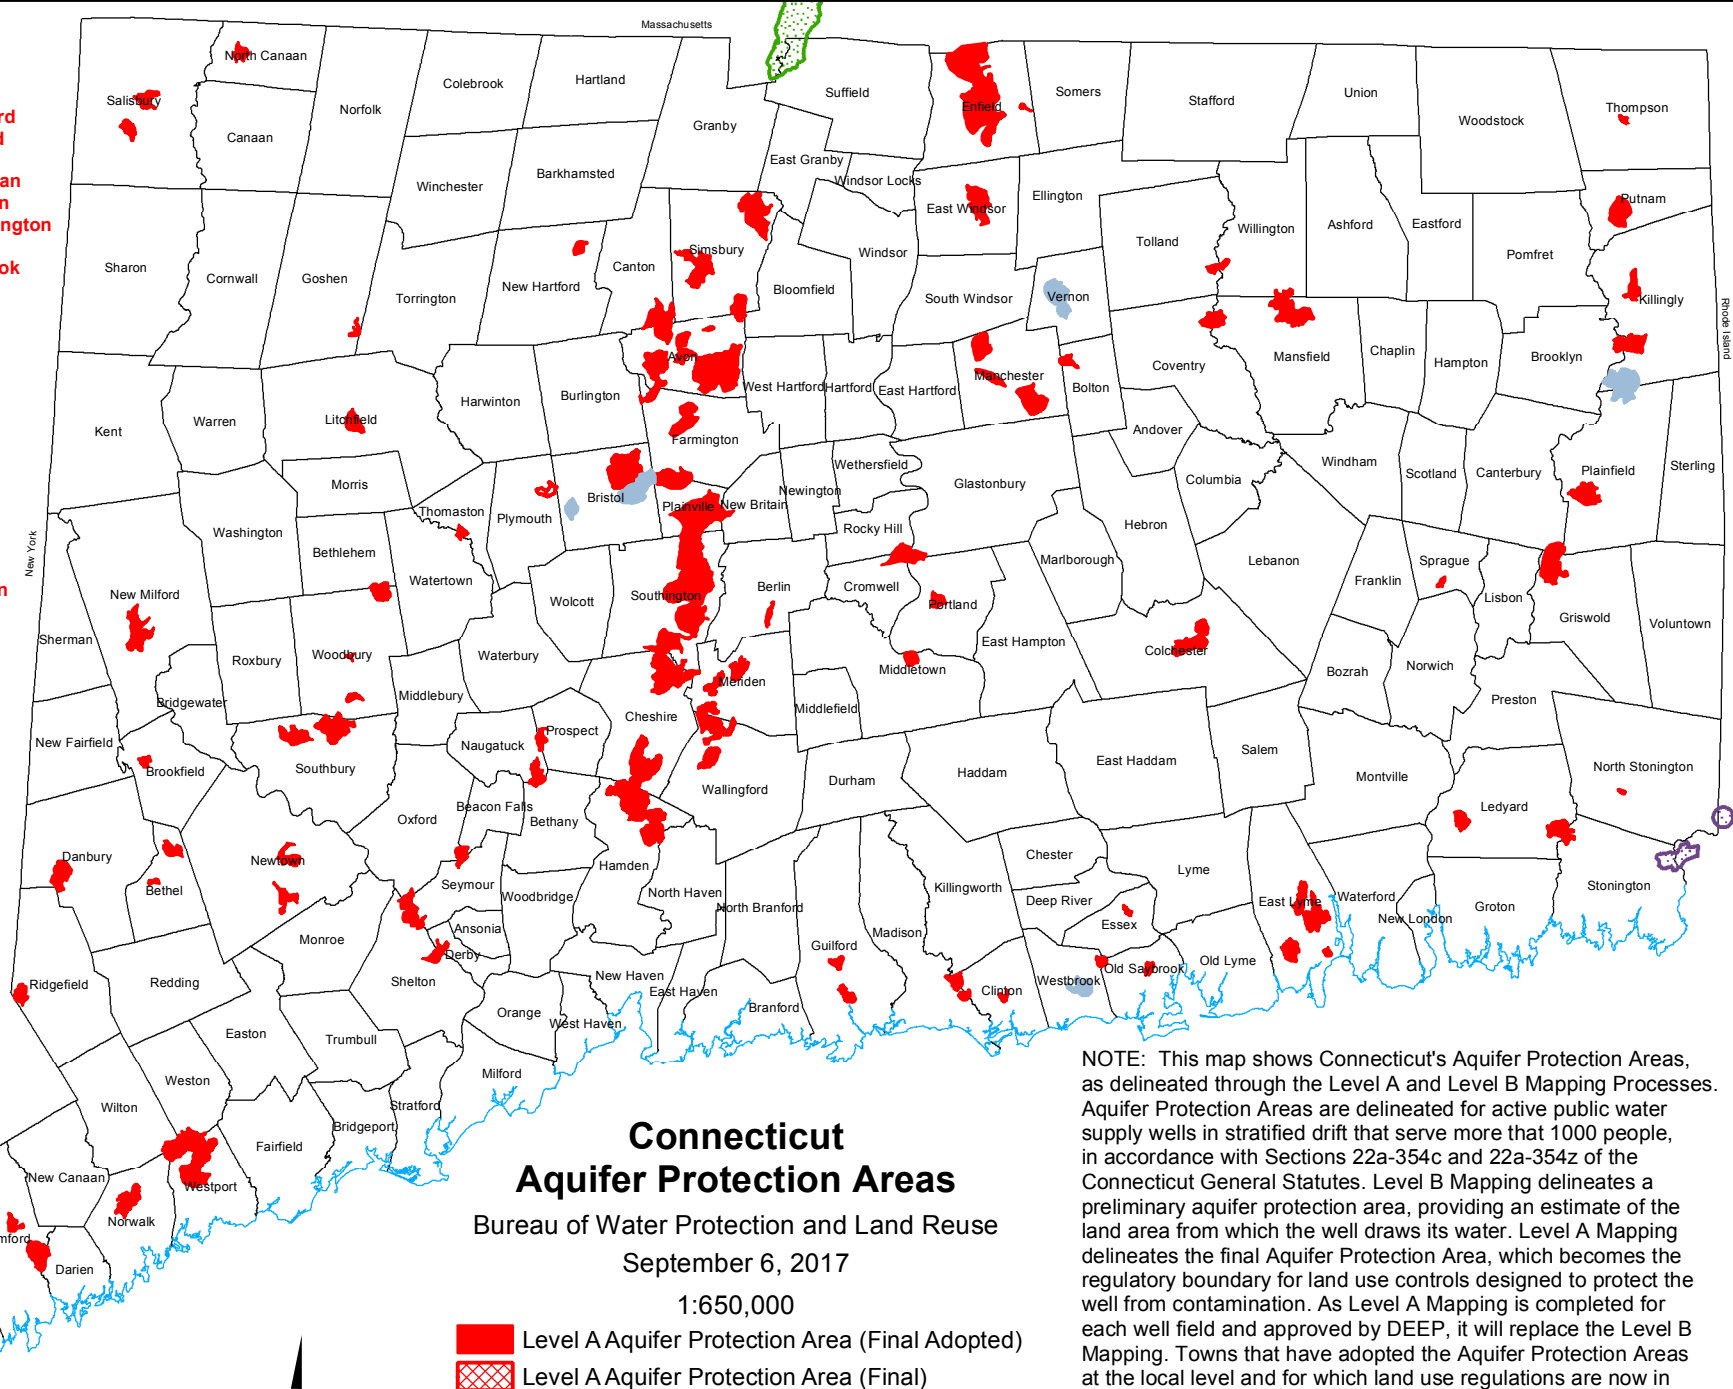

## Connecticut Aquifer Protection Areas

Bureau of Water Protection and Land Reuse

September 6, 2017

1:650,000

- Level A Aquifer Protection Area (Final Adopted)
- Level A Aquifer Protection Area (Final)
- Level B Aquifer Protection Area (Preliminary)
- Massachusetts Wellhead Protection Area
- Rhode Island Wellhead Protection Area

NOTE: This map shows Connecticut's Aquifer Protection Areas, as delineated through the Level A and Level B Mapping Processes. Aquifer Protection Areas are delineated for active public water supply wells in stratified drift that serve more than 1000 people, in accordance with Sections 22a-354c and 22a-354z of the Connecticut General Statutes. Level B Mapping delineates a preliminary aquifer protection area, providing an estimate of the land area from which the well draws its water. Level A Mapping delineates the final Aquifer Protection Area, which becomes the regulatory boundary for land use controls designed to protect the well from contamination. As Level A Mapping is completed for each well field and approved by DEEP, it will replace the Level B Mapping. Towns that have adopted the Aquifer Protection Areas at the local level and for which land use regulations are now in place are designated by the solid red above and in red in the list of Towns with Aquifer Protection Areas. Wellhead protection areas in Massachusetts and Rhode Island are shown for informational purposes only.

[www.ct.gov/deep/aquiferprotection](http://www.ct.gov/deep/aquiferprotection)



Connecticut Department of  
Energy & Environmental Protection  
79 Elm Street  
Hartford, CT 06106

